

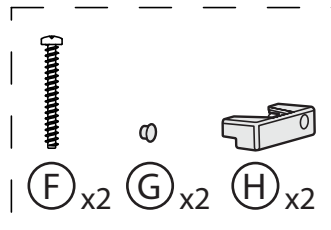


---

MOUNTING INSTRUCTION  
MONTAGEANLEITUNG  
PRÉSCRIPTION DE MONTAGE  
MONTAGE-INSTRUCTIE

**PROSCREEN CSR**  
**PROCINEMA CSR**  
**PROSCREEN**  
**PROCINEMA**

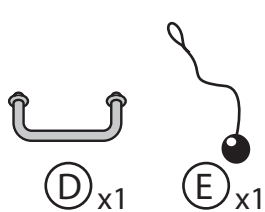


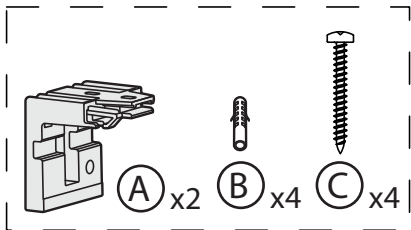

	L1	L2 +/- 420mm	L3
1600 mm	1714 mm	1134 mm	1620 mm
1800 mm	1914 mm	1334 mm	1820 mm
2000 mm	2134 mm	1554 mm	2040 mm
2200 mm	2334 mm	1754 mm	2240 mm
2400 mm	2534 mm	1954 mm	2440 mm
2800 mm	2934 mm	2354 mm	2840 mm

### FOR CSR ONLY

To adjust retraction speed  
Use a large flat screwdriver to turn the adjustment knob on the right end of the screen. To increase travel speed turn counterclockwise. To decrease the travel speed turn clockwise. Adjustments should be made in half turn increments and travel speed checked before adjusting further.

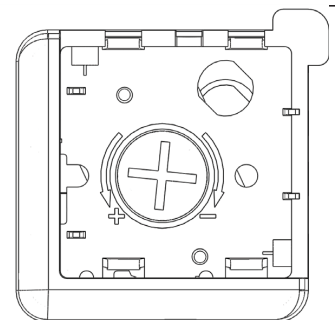

If the screen locks at the bottom and will not retract, turn adjustment knob one quarter turn counterclockwise.

