
4K USB Camera Quick Start Guide

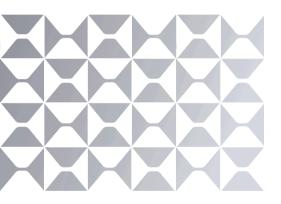

Safety Warnings

Before using and operating this equipment, please read and observe the following precautions carefully to avoid dangerous or illegal operations.

Placement

- 1) Do not expose the device to any heat source (such as electrical heater).
- ② Normal operating temperature is 0-40°C, normal operating humidity is 10%-90%RH.
- 3 Do not place the product in dusty and humid environments in case of internal circuit fault.
- The camera is not water-proof and dust-proof,do not expose the equipment directly to the sun, lest the equipment t emperature is too high to affect the normal use of the equipment.

. Children's Safety

① The product and accessories may contain some small-part. Please place them beyond the reach of children in avoidance of swallowing danger.

Power Supply

1) Please use the standard cable of this product.

Water Precaution

1) The product is not waterproof, please keep it dry.

Maintenance

- 1) Please contact professional service personnel for maintenance services.
- When the equipment is damaged, please do not disassemble it for repair without permission, please call customer service to report for repair
- 3 Do not insert any sharp or pointed object into the device.
- (4) Do not drop or hit the device to avoid damage to the device.

Statement

- ① Intelectual property right statement. The hardware design and software of this product are covered by the patents. Anyone who reproduces this product or the content of the instruction without the authorization of the Company shall assume legal liabilities.
- ② This manual is for reference only, and the actual function of the final product is subject to the actual function of the product received by the customer.
- ③ The picture is for reference only, please refer to the actual product. The company reserves the right to improve and change the appearance and design of the product without notice.

Accessories

- USB cable×1
- Lens cover×1
- · Hand-tightened screw×1
- · Wall bracket×1

• Indicator Light Status Introduction

Orange: The camera is powered on but not in use;

 
White light on: The camera is in use;

White light off: The camera is powered off;

White light flashing: The camera is in the process of upgrading;

Red light on: Mute.

• Appearance Introduction




1	Camera	2	Indicator Light
3	Microphone	4	Camera Bracket
5	USB Type-C		

Connection

Scenario 1:


- Step 1: Please rotate the camera bracket to the direction to the back, mount it on the display, as in the illustration.
- Step 2: Please use the dedicated USB cable to connect the USB Camera with the display

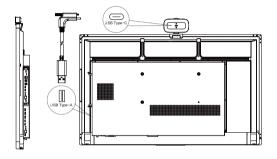

Scenario 2:

Step 1: Please rotate the camera bracket to the direction to the back, mount it on the display, as in the illustration.

Step 2: Please use the dedicated USB cable to connect the USB Camera with the Mini PC.

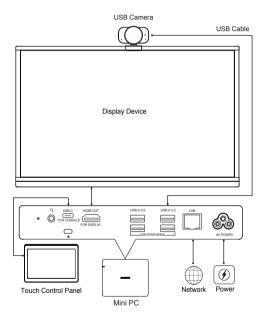


FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric and electronic waste collection point for recycling and disposal. By the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal center or the store where the product was purchased.

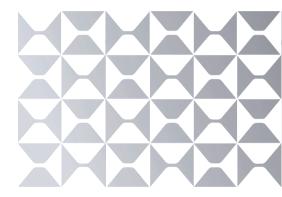



(iii) MAXHUB

