

READ ME FIRST

QUICK INSTALL GUIDE



18-Port Gigabit PoE+ L2 Managed Switch

AMS-1816P

Includes:


- ▶ AMS-1816P 18-port/16-port PoE+ switch
- ▶ Rack mount kit
- ▶ Rubber feet
- ▶ Power cord

LUXUL

INSTALLATION AND SETUP

1 Physical Installation

The AMS-1816P can easily be installed in a standard 19" rack. Two mounting ears are included for installing and stabilizing the switch. When attaching the mounting ears and installing the switch in a rack, please refer to the following illustration:

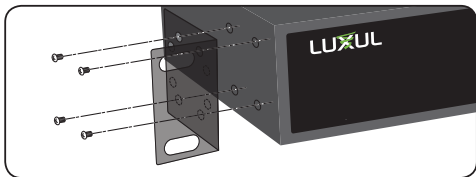

Rack-Mounting the AMS-1816P

- ▶ Use the included screws to attach the mounting ears to each side of the switch.
- ▶ Mount the switch in the rack with the LEDs facing outwards. Be sure the switch is level and properly secured in the rack.

Desktop Setup

For use as a desktop device, position and apply the included rubber feet to the bottom of the AMS-1816P.

2 Connecting Ethernet and Power

Ethernet and Power Connections

Use one of the 18 Ethernet ports to connect the AMS-1816P to any Ethernet enabled device, including control systems, routers, or other switches. No crossover cable is necessary.

The AMS-1816P supports 10/100/1000 Mbps Ethernet, 10/100 Mbps half/full-duplex mode, and 1000 Mbps full-duplex mode. Ports 17 and 18 consist of two Gigabit RJ-45 uplink ports and 2 shared SFP combo ports; use only one of the Ethernet port or fiber port with the same-numbered ports at a time.

Use the included power cable to connect the AMS-1816P to a surge-protected outlet. The AC input socket is on the rear panel. The built-in power supply supports 100-240VAC at 50/60Hz.

Network Cabling

Luxul recommends at least Cat-5e unshielded twisted pair (CAT5e UTP) cabling. To ensure best performance and stable data transmission at 1000 Mbps, use Category-6 unshielded twisted pair (CAT6 UTP).

⚠ CAUTION: *Multiple Uplink channels can create loops, resulting in network failure. Ensure only one Uplink channel exists between switches or between the AMS-1816P and a router.*

✓ NOTE: *When powering up, the port LEDs may take a moment to initialize. This is normal as the AMS-1816P initialization and startup sequence completes.*

✓ NOTE: *The AMS-1816P has an internal 185W power supply. Do not exceed 185W combined consumption of all PoE devices.*

3 Preparing for Access

IP Addressing

If the AMS-1816P is connected to a network with a 192.168.0.X/255.255.255.0 address scheme and your computer shares a similar address on the same network, you can skip to the next step, **Access and Setup**.

✔ **Note:** *If another device on your network shares the 192.168.0.4 address, you'll need to temporarily reassign or remove that device while you configure the AMS-1816P.*

If your network uses an address scheme other than 192.168.0.X, you'll need to set a temporary static IP address on the computer you're using for configuration. To do so, set the IP address of your computer to an address in the 192.168.0.X range, then set the Gateway/Router address to 192.168.0.4 (the default IP address of the AMS-1816P).

Once you're finished configuring the switch, you can return your computer's IP configuration to normal, typically "Obtain Automatically/DHCP."

✔ **Note:** Visit <http://luxul.com/ip-addressing> to learn more about changing your computer's IP address and getting connected.

4 Access and Setup

Getting Connected

Use an Ethernet cable to connect your computer to the AMS-1816P, then power on the switch.

Logging In

To access the AMS-1816P web configuration, open your web browser and enter the switch's default 192.168.0.4 IP address in the address field. Log in to the switch using the default user name and password:

Default IP: 192.168.0.4

Username: admin

Password: admin

Select the menu items on the left to view and/or modify the configuration.

Refer to the Quick Setup Guide at Luxul.com for more detailed information on setup, IP configuration and routing, PoE, VLANs, and Spanning Tree.

5 Hardware Operation

Front Panel

The front panel of the AMS-1816P includes dual colored Link/Activity LEDs that can be switched from green to blue. In addition, the front panel has Link/Activity and PoE mode indicators as well as System and Power LEDs.



AMS-1816P Front Panel View

Rear Panel

The rear panel of the AMS-1816P includes 1 console port, 16 1000Mbps RJ-45 and 2 RJ-45/SFP combo ports, as well as LED indicators for each port. Each 1000Mbps port has one Link/Activity/PoE LED. The Mode/Reset button switches the display between Link/Activity and PoE modes.



AMS-1816P Back Panel View

LED Indicators

The LED indicators on the AMS-1816P include System, Link/Act and PoE LEDs, and an LED for each port. These LED indicators show the operating status of the AMS-1816P and each port connection.

Mode/Reset Button to Change LED Functionality

Briefly tapping the Mode/Reset button switches the port indicator between displaying port link speed and PoE status.

The following chart shows the LED indicators of the AMS-1816P along with an explanation of the indicators' properties:

Indicator Name	Description	
System	Green Flashing	Indicates normal operation
	Green On	Indicates a malfunction; contact support
	Red On	Indicates power-on system initialization
	Off	Indicates startup/initialization process or that power is not on
Port Link/ Act Status 1-18	Green	1000Mbps device connected to the port
	Yellow	10/100Mbps device connected to the port
	Flashing	Port receiving or transmitting data
	Off	Nothing connected to the port

Port PoE Status 1-16	Green	Switch is providing PoE power to a device
	Yellow	PoE is off due to a fault or because the connected device is exceeding power limit
	Off	Port disconnected or link failed

Note: At startup, the port LEDs will flash briefly during a self-test

Mode/Reset Button to Reset/Restore

The Reset button (located at the lower-left corner of the front panel) is used to reset (reboot) the switch or to restore the switch to factory default settings.

- ▶ **To Reboot/Reset the Switch:** With the AMS-1816P powered on, press the Reset button for approximately three seconds until the Link/Act and PoE LEDs both light, then release the button.

⚠ CAUTION: *Holding the button between 3 and 8 seconds will erase all of the config except the IP address of the switch.*

- ▶ **To Restore Default Settings:** With the AMS-1816P powered on, press and hold the Reset button approximately eight seconds, until both the Link/Act and PoE LEDs turn off, then release the Reset button. The switch will automatically restore factory default settings and reboot. Once the System LED starts flashing again, the AMS-1816P is running with factory defaults.

⚠ CAUTION: *Please note that restoring Default Settings will remove any/all custom configuration.*

Sales

801-822-5450
sales@luxul.com

Technical Support

801-822-5450
support@luxul.com

Copyright and Trademark Notices

No part of this document may be modified or adapted in any way, for any purposes without permission in writing from Luxul. The material in this document is subject to change without notice. Luxul reserves the right to make changes to any product to improve reliability, function, or design. No license is granted, either expressly or by implication or otherwise under any Luxul intellectual property rights. An implied license only exists for equipment, circuits and subsystems contained in this or any Luxul product.

© Copyright 2018 Luxul. All rights reserved. The name Luxul, the Luxul logo, the Luxul logo mark and Simply Connected are all trademarks and or registered trademarks of Luxul Wireless, Inc. All other trademarks and registered trademarks are property of their respective holders.

LUX-QIG-AMS-1816P-v6 09141802

A brand of  **legrand**[®]

